

## Classic Installation Instructions Kawasaki Vulcan 1500 FI (2000- )

1. Remove the two button head screws holding the cable retaining bracket to the front of the top triple clamp using a 5 mm allen wrench. **Figure 1.**


2. Using the same allen wrench remove the two button head screws attaching the turn signal bar to the sides of the lower triple clamp. **Figure 1.**

3. Locate the two 1/4" spacers in the hardware kit and the two fork brackets. Determine the right and left bracket using the illustration. **Figure 2.** Position the left bracket on the side of the triple clamps on the outside of the turn signal bar. Using the stock button head screw fasten the bracket through the turn signal bar and into the lower triple clamp. Leave the screw loose. Position the bracket's top mounting hole with the mounting hole in the top triple clamp. Place the 1/4" spacer between the bracket and the triple clamp and using the stock bolt attach bracket to triple clamp. Square up the bracket and tighten the screws. Repeat the procedure for the right fork bracket.

4. Install the windshield by positioning the windshield support brackets on the outside of the fork brackets. Using the 1/4"x1/2 "allen head screws and 1/4" washers attach the windshield to the brackets.

**Note:** There are three mounting holes on each bracket, use only two. Pick the two that will put the windshield at the height you want.

**Figure 1**

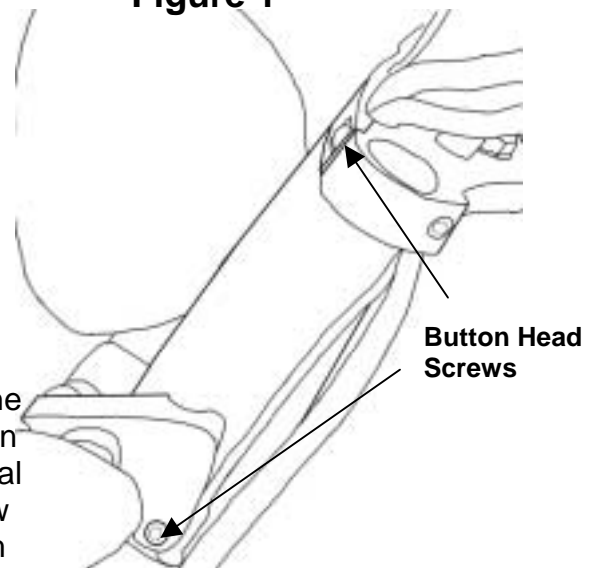

**Figure 2**

