

## Suzuki V-Strom 650/1000 Windshield Mounting Instructions

1. Remove the two black plastic covers from the outside of the windshield with a Phillips screwdriver. Remove the screws from the covers. Set the covers aside they will not be reused.
2. Remove the four 5mm screws, four plastic bushings, and the windshield from the Suzuki windshield holder system. Set the four bushings and the windshield aside.
3. Position the Suzuki windshield holder in the first position up from the bottom. In this position there is a 1-1/8" gap between the bottom of the windshield holder and the edge of the mask. See Figure 1. If the windshield holder has to be moved, remove the four socket head fasteners, reposition the holder and reinstall the four fasteners.
4. Select the right side Angle Adjuster. See Figure 2. Position the right side Angle Adjuster onto the right side of the Suzuki windshield holder. Tilt the top of the Angle Adjuster to the outside, so you have access to the two screw holes in the base strap. See Figure 1.

**Note:** Right or left is referenced from the rider sitting on the bike.

5. Using two of the four Suzuki 5mm screws, insert them through the holes in the base strap and tighten them into the Suzuki well nuts. See Figure 1.
6. Insert one of the two screws from the Suzuki plastic cover into the supplied rubber-backed flat washer and screw into the plastic boss, which protrudes through the base strap. See Figure 1. Tilt the top strap of the Angle Adjuster back to the center.
7. Repeat steps 4 through 6 with the left Angle Adjuster.

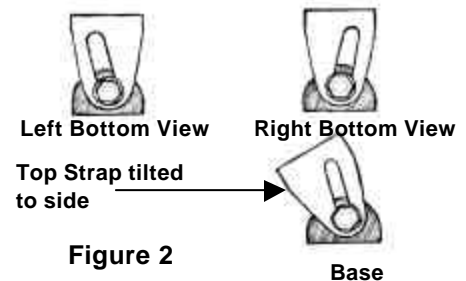
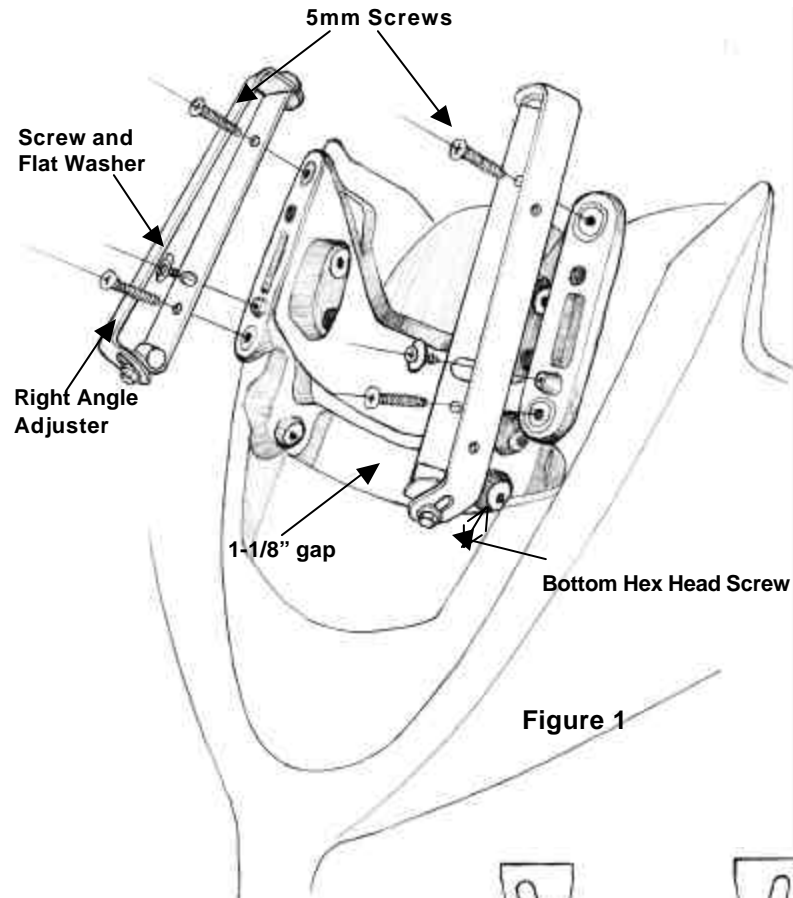


Figure 2

**Note:** Remove the hand guards, if required from motorcycles equipped with them. On each side: Remove the 5mm screw, with Phillips slot, from the top of the lever pivot. Loosen the 10mm nut on the bottom of the lever pivot and pull the hand guard off. Set it aside and tighten the bottom nut as a jam nut.

8. Place the Rifle windshield into position on the Angle Adjusters, put the black plastic mask into position on the windshield, and secure with the four button head screws provided.

**Note:** When properly installed – the Rifle windshield has a greater gap between the windshield and the mounting parts and the windshield is angled down more than the Suzuki windshield.

9. The windshield angle is adjusted by loosening the hex head screw at the bottom of each Adjuster (see Figure 3). To adjust the windshield angle, rotate the windshield to the desired position, and re-tighten the two screws.

